


System use image of 【Temp-ID】

Setting and start-up

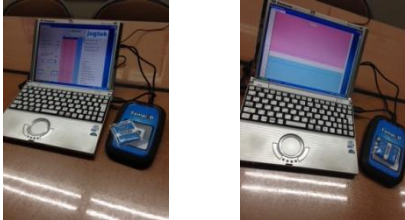

Installation



Reading



USB connection a dedicated reader to the PC.
In the software, settings such as the distance fraction, upper limit value of the recording, and the lower limit value, to perform an activation.

Started tag insert in the Baggage to be measured.
Ships luggage, Transport start it.

Such as after delivery, a record of the tag that has completed the measurement, I read held up a mobile terminal.
Possible check on the spot.
It is also possible to transmit the data on line.

After the measurement, recovery
Again reset on the software, reboot
Allows the use of repetition!